

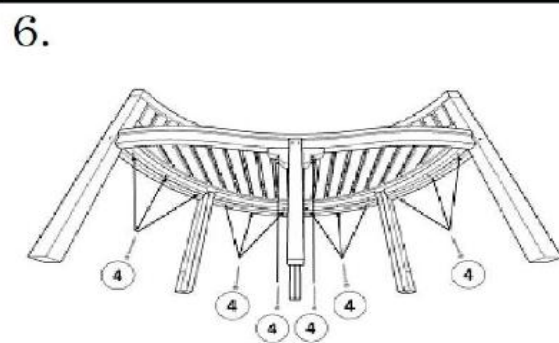
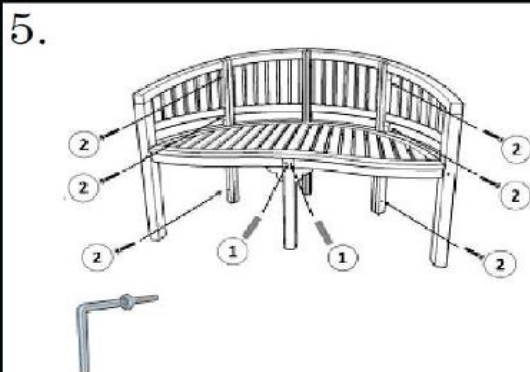
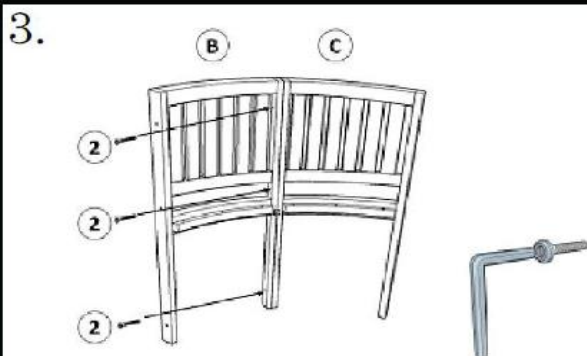
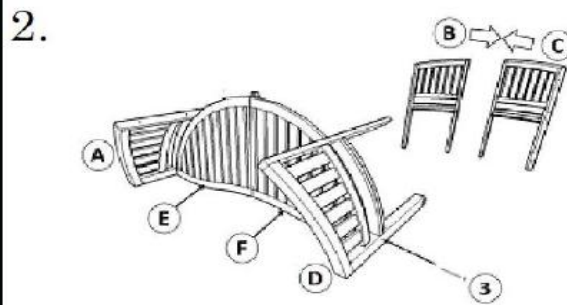


ASSEMBLING INSTRUCTION


BANK AMBON 3 SITZER

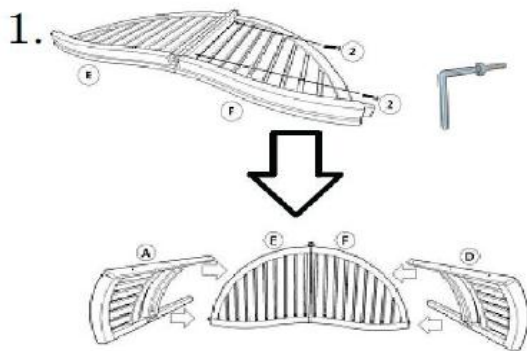

1. M8x50, 4 pcs

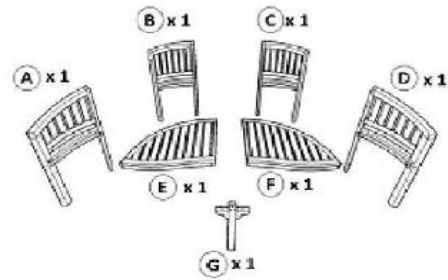

3. M6x75, 2 pcs



5. 2 pcs



2. M6x35, 11 pcs



4. M4x15, 14 pcs

